## **ErP Power Mode Information Sheet**

Number: 14-008





## Phaser 3020

Device Type ErP Equipment Type:	Printer Other Networked Equipment	
<b>POWER SUPPLY</b> Voltage (Volts) Output Rating (Watts)	230 575	
POWER MODE	Power (Watts)	Default Period
	(Walls)	(
Active	312.5	Not applicable
Ready/Standby	35.2	0
Sleep 1	1.8	1
Plugged In Off	0.2	Not applicable
Networked Standby - All	1.8	Not applicable
Networked Standby - USB	1.8	1
Networked Standby - Wireless	1.8	1

## **GUIDANCE – WIRELESS PORT**

- 1. Deactivation (LAN Access Point Mode)
  - (Warning- Deactivation removes the Wireless connection between the printer and the Network's access point; (re)activation is accomplished using a USB connection between the printer and computer)
- Deactivation can be accomplished using a web browser on a computer connected to the same network.
- Enter the CWIS Web application by typing the printer's LAN IP address in a web browser's address line.
- Choose the 'Properties' tab or 'Properties' from the side menu.
- Login to the Account 'Admin' with the default password of 1111 or the password you created.
- Choose "Network Settings" and then "WiFi" from the side menu
- Toggle the Enable Check in the main display area.
- Verify your intention because this will disable Wifi on the printer and the wireless connection you have to it.
- 2. Activation
- Activation can be accomplished by connecting to the printer from your computer via a USB cable.
- From the Start Menu go to All Programs, Xerox Printer, Xerox Easy Wireless Setup.
- Select the wireless network you want the Xerox device to connect to.
- Enter the network password and select next.
- Activation is confirmed with the 'Setup Complete' display

For more information about Xerox environmental programs in *North America*, refer to: <u>www.xerox.com/Environment</u> For more information about Xerox environmental programs in *Europe*, refer to: <u>www.xerox.com/environment\_europe</u>