Recommended Xerox Media for Phaser 6300N, 6300DN, 6350DP, 6350DT, and 6350DX (Europe)

Revision 6.0, Publish Date: December, 2007

Important Note:
All media are listed by product, Paper Type System Setting, Paper Type, weight (standard gsm), re-order number, size, and tray runability. The additional information column is for hints and tips on how to run certain media applications.

Media recommendations made in this publication are based on qualification tests* conducted using standard test images with moderate to heavy image area coverage.   Test duration for each product/media type is based on the suggested machine monthly copy/print volume. Test machines are maintained within specifications defined by user documentation.

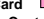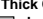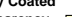***Testing environment Temperature 20 degreesC±4, Relative Humidity 40% ±10%.**

*Machine reliability specifications may be affected by increased usage of the Transparency, Card Stock, Label, and Special modes. In addition, variances in machine reliability may occur due to extended use of some media types. Your Xerox service representative can advise you on special application media types for long duration copy/print runs.

For specifications and a description of the various media types discussed in this publication, please refer to www.Xerox.com.

For additional recommended Phaser media, look under Supplies on: http://www.office.xerox.com/ and select your Product Family.

Plain ▭
Heavy Plain ▭
Thin Card ▭   Thick Card ▭
Glossy Coated ▭   Label ▭
Transparency ▭

December, 2007 Phaser 6300N, 6300DN, 6350DP, 6350DT, and 6350DX

A=Auto Duplex
M=Manual Duplex
S=Simplex Only

xerox

Paper	Paper Type	Weight	Re-Order #	Cross Reference #	Type	Size	Trays 1/MPT	2	3	4	5	Additional Information
												Refer to the "Paper Tips" embedded page for additional printer-specific information, e.g., High Capacity tray usage.
Xerox Colotech+	Plain	90 gsm	3R97988			A4	A	A	A	A	A	Paper Type *Plain* should be selected on the user interface for Trays/MPT. For higher print gloss, use the *Heavy Plain* setting.
	Heavy Plain	100 gsm	3R97993			A4	A	A	A	A	A	Paper Type *Heavy Plain* should be selected on the user interface for Trays/MPT.
	Heavy Plain	120 gsm	3R97958			A4	A	A	A	A	A	Paper Type *Heavy Plain* should be selected on the user interface for Trays/MPT.
	Thin Card	160 gsm	3R97963			A4	A	A	A	A	A	Paper Type *Thin Card* should be selected on the user interface for Trays/MPT.
	Thick Card	200 gsm	3R97967			A4	M					Paper Type *Thick Card* should be selected on the user interface for Trays/MPT. Environmental condition may require that this product be fed one sheet at a time.
Xerox Colour Impressions	Plain	90 gsm	3R97663			A4	A	A	A	A	A	Paper Type *Plain* should be selected on the user interface for Trays/MPT. For higher print gloss, use the *Heavy Plain* setting.
Xerox Business	Plain	80 gsm	3R91820			A4	A	A	A	A	A	Paper Type *Plain* should be selected on the user interface for Trays/MPT.
Xerox Premier	Plain	80 gsm	3R91720			A4	A	A	A	A	A	Paper Type *Plain* should be selected on the user interface for Trays/MPT.
	Thin Card	160 gsm	3R93009			A4	A	A	A	A	A	Paper Type *Thin Card* should be selected on the user interface for Trays/MPT.
Xerox Performer	Plain	80 gsm	3R90649			A4	A	A	A	A	A	Paper Type *Plain* should be selected on the user interface for Trays/MPT.
Xerox Recycled	Plain	80 gsm	3R91165			A4	A	A	A	A	A	Paper Type *Plain* should be selected on the user interface for Trays/MPT. Performance may vary at extremes in humidity.

Plain ▭
Heavy Plain ▭
Thin Card ▭   Thick Card ▭
Glossy Coated ▭ Label ▭
Transparency ▭

**December, 2007
Phaser 6300N,
6300DN, 6350DP,
6350DT, and 6350DX**

A=Auto Duplex
M=Manual Duplex
S=Simplex Only

xerox

Paper	Paper Type	Weight	Re-Order #	Cross Reference #	Type	Size	Trays					Additional Information
							1/MPT	2	3	4	5	Refer to the "Paper Tips" embedded page for additional printer-specific information, e.g., High Capacity tray usage.
Xerox Digital Colour Colotech+ Gloss	Glossy Coated	140gsm	3R97577			A4	A	A	A	A	A	Paper Type *Glossy Coated* should be selected on the user interface. Environmental condition may require that this product be fed one sheet at a time. Gloss variation can occur from machine rolls, especially on high area coverage prints.
	Thick Card	210gsm	3R97583			A4	M					Paper Type *Thick Card* should be selected on the user interface. Environmental condition may require that this product be fed one sheet at a time. Gloss variation can occur from machine rolls, especially on high area coverage prints.
Xerox Trifold Brochures	Thin Card	176 gsm	3R97946	103R01019		A4	M					Paper Type *Thick Card* should be selected on the user interface for Tray1/MPT.
Xerox Premium Business Cards	Thick Card	195gsm	3R97512			A4	M					Paper Type *Business Card* should be selected on the user interface for Tray1/MPT.
Xerox Colour Laser/ Copier Labels	Label		3R93872		1 up	A4	S	S	S	S	S	Paper Type *Labels* should be selected on the user interface for Trays/MPT.
			3R93873		6 up	A4	S	S	S	S	S	
			3R93874		8 up	A4	S	S	S	S	S	
			3R93875		14 up	A4	S	S	S	S	S	
Xerox Phaser™ 25-Series Premium Transparencies	Transparency			016-1948-00		A4	S	S	S	S	S	Paper Type *Transparency* should be selected on the user interface for Trays/MPT. It is not recommended to output more than 20 transparencies at a time.